

# Quick Start Guide



LCDPhoto.com® MONET LCD Photo Frame

## § BEFORE YOU BEGIN


Check the following packing list before using this product. If any item is missing, contact us immediately at [support@LCDPhoto.com](mailto:support@LCDPhoto.com).

LCDPhoto MONET Digital Photo Frame x 1  
64MB Compact Flash Card x 1  
LCDPhoto Remote Control x 1  
Motion Sensor Box x 1  
DC Power Cable for Motion Sensor x 1  
12 in 1 Media Card Reader x 1  
AC to DC adapter x 1  
Video/Audio Cable to TV x 1  
USB Cable x 1

## § Setting Up and Running

Steps:

1. Use **DC Power Cable** to make connection between **Motion Sensor Box**, **Monet LCD Photo Frame**, and **AC Adapter**.
2. Plug **AC Adapter** into power outlet.
3. Insert the **Compact Flash Memory Card** with Demo Pictures & MP3 into **Monet LCD Photo Frame**.

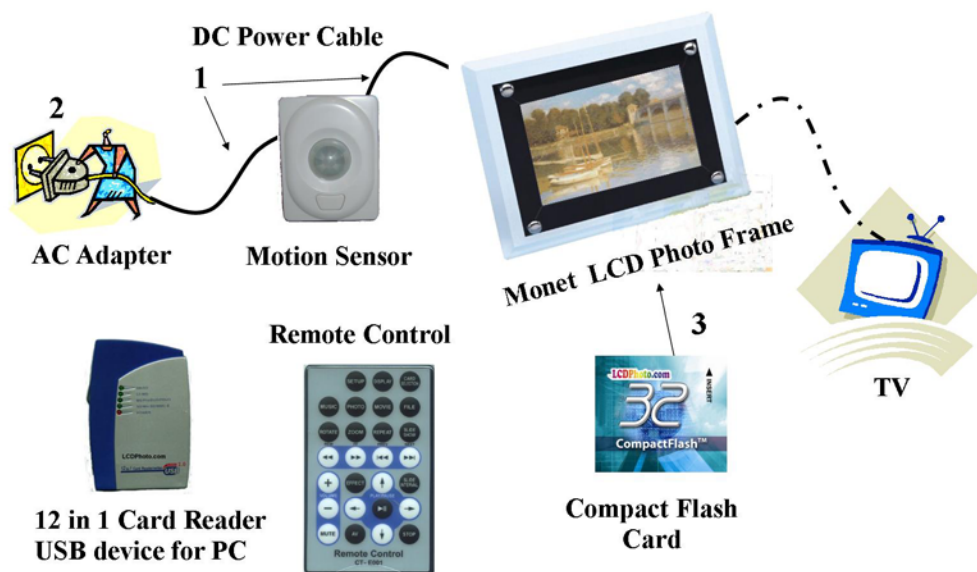

1. Once the setup is completed, please make sure you place the **Motion Sensor Box** at a place where movements can be detected. Finally, turn on the Power Switch (at back and to the side of photo frame), a slide show will begin automatically when **Motion Sensor** picks up a movement, such as hand waving, people walking, etc. When the **Motion Sensor** is unable to detect any movement for a period time (user selectable), the power will shut off automatically. The power will automatically turn on when the **Motion Sensor** detects movement again.
2. Video out to a display can only be either LCD Photo Frame or TV

Your **Monet LCD Photo Frame** is set to **PHOTO SLIDE SHOW with MP3 Music** by default. The following are basic controls to the Monet LCD Photo Frame using the **Remote Control**.

#### **PREVIEW PHOTO or Single Picture Viewing**

- (1) While a slide show is playing, press "**STOP**" key once.
- (2) Press "**PHOTO**" to access the Photo Menu.
- (3) Select photo by using the arrow keys, then press the "**PLAY/PAUSE**" key.
- (4) Press "**PLAY/PAUSE**" again to pause the slide show.
- (5) Use "**PREV**" and "**NEXT**" to select previous and next photo.
- (6) Use "**Zoom**" to zoom in photo (2x / 4x / OFF).
- (7) To go back to slide show mode, press "**SLIDE SHOW**" key.

#### **SLIDE SHOW SPEED & TRANSITION EFFECT**

- (1) Press "Slide Interval" to change speed to 1, 3, 5 or 10 seconds.
- (2) Press "EFFECT" to change Transition Effect (14 Types)

#### **TURN ON/OFF MP3 BACKGROUND MUSIC**

- (1) If any MP3 files exist on the CF card, it will play MP3 music by default.
- (2) Press "**+**" or "**-**" to control Music Volume.
- (3) Press "**MUTE**" to mute and turn off Music.

#### **MANAGE FILES and FILE SYSTEM**

- (1) Press "**FILE**" to access FILE LIBRARY
- (2) Select file by using the arrow keys, then Press "**DISPLAY**".
- (3) You can COPY, DELETE, RENAME and create NEW FOLDER

#### **OUTPUT to TV**

- (1) Use video/audio cable to connect the LCD Photo Frame to a TV.
- (2) Press "**AV**" Key to display on TV
- (3) Press "**AV**" again to display on LCD Photo Frame.

#### **DEFAULT SETUP & PREFERENCES**

- (1) Press "**SETUP**" to access SETUP MENU
- (2) Default Slide Show Setup: **SLIDE SHOW SETUP** ->  
SLIDE SHOW MODE: **SLIDE SHOW**  
AUTO START : **ON**

#### **MONET LCD PHOTO FRAME's LATEST & DETAILED OPERATION MANUAL:**

For update & detailed operation manual, please download from <http://www.LCDPhoto.com/>.

#### **MPEG OPERATION MANUAL (Optional):**

If you purchased Monet LCD Photo Frame with MPEG features, please find the operation manual at <http://www.LCDPhoto.com/>.

#### **12 in 1 MEDIA CARD READER**

Windows 2000/ME/XP requires no software setup. Simply use the **USB Cable** to connect your computer with **12 in 1 Media Card Reader**, your computer will then detect 4 removable disk drives. You can move or transfer JPEG/MP3/MPEG files between the removable drives and your computer hard drive. If you have Windows 98, please download the driver from <http://www.LCDphoto.com/>

#### **ONE YEAR LIMITED WARRANTY**

The unit is warranted to be free from defects for a period of one year from the date of original purchase subject to the following:

- The unit has not been misused and has not been dismantled or tampered with
- The unit has not been in contact or immersed in water

For Technical Support and Product Update Information, please visit to <http://www.LCDPhoto.com/> , or email us at [support@LCDPhoto.com](mailto:support@LCDPhoto.com)

