

Quick Start Guide

LCDPhoto.com MONET LCD Photo Frame
CK-080SE & CK-080RE



www.lcdphoto.com

◆ BEFORE YOU BEGIN

Check the following packing list before using this product. If any item is missing, contact us immediately at support@LCDPhoto.com.


LCDPhoto MONET Digital Photo Frame x 1
LCDPhoto Remote Control x 1
Motion Sensor Box x 1
DC Power Cable for Motion Sensor x 1
AC to DC Power Adapter x 1

◆ Setting Up and Running

Steps:

1. To setup the motion sensor feature, connect the rectangular connector of the DC Power Cable to the Motion Sensor Box. Then connect the male connector to the Monet LCD Photo Frame, and the female connector to the AC Adapter.
2. Plug AC Adapter into power outlet.
3. Insert the Memory Cards (CF/MD/MMC/SD/XD/MS) into Monet LCD Photo Frame.
4. Turn on the Power Switch.

DC Power Cable for Motion Sensor

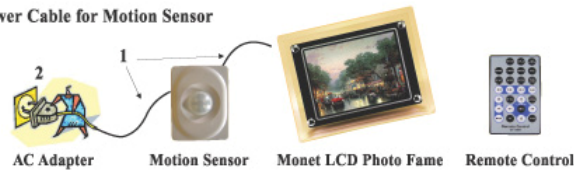

Memory Cards: CF / MD / MMC / SD / XD / MS

** Once the setup is completed, please make sure you place the **Motion Sensor Box** at a place where movements can be detected. Finally, turn on the Power Switch (at back and to the side of photo frame), a slide show will begin automatically when **Motion Sensor** picks up a movement, such as hand waving, people walking, etc. When the **Motion Sensor** is unable to detect any movement for a period time (user selectable), the power will shut off automatically. The power will automatically turn on when the **Motion Sensor** detects movement again.

Your Monet LCD Photo Frame is set to PHOTO SLIDE SHOW with MP3 background music by default. The following are basic controls to the Monet LCD Photo Frame using the Remote Control.

PREVIEW PHOTO or Single Picture Viewing

- (1) While a slide show is playing, press **"STOP"** key once.
- (2) Press **"PHOTO"** to access the Photo Menu.
- (3) Select photo by using the arrow keys, then press the **"PLAY/PAUSE"** key.
- (4) Press **"PLAY/PAUSE"** again to pause the slide show.
- (5) Use **"PREV"** and **"NEXT"** to select previous and next photo.
- (6) Use **"Zoom"** to zoom in photo (2x / 4x / OFF).
- (7) To go back to slide show mode, press **"SLIDE SHOW"** key.

SLIDE SHOW SPEED & TRANSITION EFFECT

- (1) Press **"SLIDE INTERVAL"** to change speed to 1, 3, 5, 10 secs, 1min, or 5mins.
- (2) Press **"EFFECT"** to change Transition Effect (14 Types).

TURN ON/OFF MP3 BACKGROUND MUSIC

- (1) If any MP3 files exist on the media card, it will play MP3 music background by default.
- (2) Press **"+"** or **"-"** to control Music Volume.
- (3) Press **"MUTE"** to mute and turn off Music.



PLAY MP3 or MPEG

- (1) While a slide show is playing, press **"STOP"** key once.
- (2) Press **"MUSIC"** for MP3 or **"MOVIE"** for MPEG menu.
- (3) Use the arrow keys to select the desired file and press **"PLAY"** key.

CARD SELECTION & DISPLAY

- (1) Press **"CARD SELECTION"** to select memory card.
- (2) Press **"DISPLAY"** to display picture / music information.

MANAGE FILES and FILE SYSTEM

- (3) Press **"FILE"** to access FILE LIBRARY
- (4) Select file by using the arrow keys, then Press **"DISPLAY"**.
- (5) You can COPY, DELETE, RENAME and create NEW FOLDER

DEFAULT SETUP & PREFERENCES

- (1) Press **"SETUP"** to access SETUP MENU
- (2) Default Slide Show Setup: **SLIDESHOW SETUP -> AUTO START : ON**

MONET LCD PHOTO FRAME's LATEST & DETAILED OPERATION MANUAL:

For update & detailed operation manual, please download from <http://support.LCDPhoto.com/>.

For additional detail on playing mpeg files, please see the operation manual at <http://support.LCDPhoto.com/>.

ONE YEAR LIMITED WARRANTY

The unit is warranted to be free from defects for a period of one year from the date of original purchase subject to the following:

- The unit has not been misused and has not been dismantled or tampered with
- The unit has not been in contact or immersed in water

For Technical Support and Product Update Information, please visit to <http://www.LCDPhoto.com/>, or email us at support@LCDPhoto.com